

EUREKA 2 MOTOR CLEANING SYSTEM



WHIRLWIND

BAGLESS CYCLONIC SYSTEM

Home Cleaning System Vacuum Cleaner

Household Type

Owner's Guide 6980 Series

IMPORTANT

**Do not return this
product to the store.**

**For assembly problems or
questions contact:** Eureka's
Customer Service Division toll
free at 1-800-282-2886*, 7 a.m.
to 8 p.m., Central Standard
Time, Monday through
Saturday.

**For replacement of broken or
missing items** to be shipped
direct to you, call 1-800-438-
7352*, 8 a.m. to 4:45 p.m.,
Central Standard Time,
Monday through Friday.

*En Mexico llame al 5670-6169

Index

Important Safeguards	2
Service Information	4
Thermal Cut Off	4
Assembly	5
Use	6-7
Accessories	8
Dust Compartment	9
Filters	9-10
Brush Roll	10
Brush Roll Belt	10-11
Light Bulb	11
Problem Solving	12
Customer Order Form	13
Warranty	15

IMPORTANT SAFEGUARDS

When using an electrical appliance, basic precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING THIS VACUUM CLEANER.

WARNING

To reduce the risk of fire, electric shock, or injury:

- Do not use outdoors or on wet surfaces.
- **Do not leave vacuum cleaner when plugged in.** Turn off the switch and unplug the electrical cord when not in use and before servicing.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If vacuum cleaner is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center before using.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run vacuum cleaner over cord. Keep cord away from heated surfaces.
- Hold plug when rewinding onto cord reel. Do not allow plug to whip when rewinding.
- Do not use extension cords or outlets with inadequate current carrying capacity.
- Turn off all controls before unplugging.
- Always turn off this appliance before connecting or disconnecting either hose or motorized nozzle.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- The hose contains electrical wires. Do not use if damaged, cut or punctured. Avoid picking up sharp objects.
- Do not handle plug or vacuum cleaner with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
- This vacuum cleaner creates suction and contains a revolving brush roll. Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without cyclonic cassette and all filters in place.
- Belt pulleys can become hot during normal use. To prevent burns, avoid touching the belt pulley when servicing the drive belt.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible liquids such as gasoline, or use in areas where they may be present.
- Store your cleaner in a cool, dry area.
- Keep your work area well lighted.
- Unplug electrical appliances before vacuuming them.

SAVE THESE INSTRUCTIONS

CONSEILS DE SÉCURITÉ

Lors de l'utilisation d'un appareil électrique, quelques précautions élémentaires doivent être observées, incluant les suivantes:

LISEZ TOUTES LES INSTRUCTIONS AVANT D'UTILISER VOTRE ASPIRATEUR.

AVERTISSEMENT

Pour réduire le risque de feu, de choc électrique, ou de blessure:

- Ne pas utiliser à l'extérieur ou sur des surfaces mouillées.
- **Fermez le commutateur et débranchez l'appareil lorsque vous ne l'utilisez pas ou avant le nettoyage ou l'entretien.**
- Ne permettez pas qu'il soit utilisé comme jouet. Une attention particulière est nécessaire lorsque utilisé par ou près d'un enfant.
- Suivez les recommandations d'utilisation de ce manuel. Utilisez uniquement les accessoires recommandés par le fabricant.
- Ne pas utiliser si le cordon ou la fiche sont endommagés. Si l'aspirateur ne fonctionne pas comme il le devrait, s'il a été échappé, s'il est endommagé, s'il a été laissé à l'extérieur ou échappé dans l'eau, retournez-le à un centre de service avant d'utiliser.
- Ne pas le tirer ou le transporter par le cordon, ne pas utiliser le cordon un guise de poignée. Ne pas fermer une porte sur le cordon ou tirer le cordon sur des coins ou bordures pointus. Ne pas circuler sur le cordon avec l'aspirateur. Tenir le cordon à distance des surfaces chauffantes.
- Tenir la fiche lorsque vous rebobinez le cordon électrique. Ne pas permettre que la fiche batte l'air.
- Ne pas utiliser des rallonges ou des prises qui n'ont pas de capacité suffisante pour transporter le courant.
- Fermer tous les contrôles avant de débrancher.
- Éteindre toujours l'appareil avant de connecter ou de déconnecter le tuyau ou la lance motorisée.
- Ne pas débrancher en tirant sur le cordon. Pour débrancher, tenez la fiche et non le cordon.
- Le tuyau contient des fils électriques et ne doit pas être utilisé s'il est abîmé, coupé ou percé. Éviter de ramasser les objets aigus.
- Ne pas manipuler la fiche ou l'aspirateur avec les mains mouillées.
- Ne pas rien insérer dans les ouvertures. Ne pas utiliser si des ouvertures sont bloquées; assurez-vous qu'elles soient dégagées de poussière, mousse, cheveux ou toute autre chose qui pourrait réduire le passage de l'air.
- Cet aspirateur crée de la succion et contient un rouleau-brosse tournant. Tenir les parties mobiles et les ouvertures loin des cheveux, du linge, des doigts et de toute partie du corps.
- Ne pas ramasser des objets qui brûlent ou fument comme les cigarettes, allumettes ou cendres chaudes.
- N'utilisez pas sans cassette cyclonic et tous filtres en place.
- Les poulies du courroie peuvent devenir chaudes pendant l'utilisation normale. Pour prévenir des brûlures, évitez de touché la poulie du courroie lorsque vous réparez la courroie.
- Portez une attention particulière lorsque vous nettoyez les escaliers.
- Ne pas utiliser pour ramasser des liquides inflammables ou combustibles comme de l'essence. Ne pas utiliser dans les endroits où ces liquides pourraient être présents.
- Entrez votre aspirateur à l'intérieur dans un endroit propre et sec.
- Maintenez un bon éclairage à l'endroit où vous travaillez.
- Débrancher les appareils électrique avant de les balayer.

CONSERVEZ CES INSTRUCTIONS

To reduce the risk of electric shock, this appliance has a polarized plug (one blade is wider than the other). The plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet. Do not change the plug in any way.

Afin de réduire le risque de choc électrique, cet appareil est muni d'une fiche polarisée (une des lames est plus large). Cette fiche ne peut être insérée dans une prise polarisée que d'une seule façon. Si la fiche ne peut être insérée dans la prise, retourner la fiche. Si la fiche ne peut toujours pas être insérée dans la prise, faire installer une prise adéquate par un électricien qualifié. Ne pas modifier la fiche.

GENERAL INFORMATION

The filters may have come dislodged in shipping. Check the filters to insure proper seating before attempting to use the cleaner. Do not operate the cleaner without the filters. Damage may result to the motor (see Filters section).

The cleaner is designed to pick up dirt and dust particles. Avoid picking up hard or sharp objects with the cleaner to avoid hose clogging or possible motor damage.

Service Information

The instructions in this booklet serve as a guide to routine maintenance. If additional service is required, telephone toll free:

USA: 1-800-282-2886
Mexico: 5670-6169
Canada: 1-800-282-2886

If you prefer, you can write to The Eureka Company, Service Division, 807 North Main Street, Bloomington, Illinois 61701, USA. In Canada write to The Eureka Company, 866 Langs Drive, Cambridge, Ontario N3H 2N7. Refer to The Eureka Limited Warranty for complete service information.




DO NOT OIL the motors (in the canister and the motorized nozzle) or the brush roll at any time. The bearings are permanently lubricated and sealed.

Rating Plate

The model, type and serial numbers are indicated on the rating plate located on the underneath side of the cleaner. For prompt and complete service information, always refer to these numbers when inquiring about service.

Model No. & Type _____

Serial No. _____



MADE IN SWEDEN		THE EUREKA COMPANY BLOOMINGTON, IL 61701 SERVICE INFORMATION: 1-800-282-2886	
MODEL	TYPE	SERIAL NO.	
HOUSEHOLD TYPE LISTED C  US 945 G		120 V 60 HZ	AMPS 12.0

Thermal Cut Off


This vacuum cleaner has a special thermostat that protects the cleaner in case of motor overheating. If the cleaner suddenly shuts off, push the switch pedal once and unplug the cleaner. Check the cleaner for a possible source of overheating such as a blocked hose or clogged filter. If these conditions are found, fix them and wait at least 30 minutes before attempting to use the cleaner. After the 30 minute period, plug the cleaner back in and turn on the switch. If the cleaner still does not run, call a Eureka Service Station.

ASSEMBLY ITEMS

NOTE: Unpack and identify all parts. Fully assemble before using.

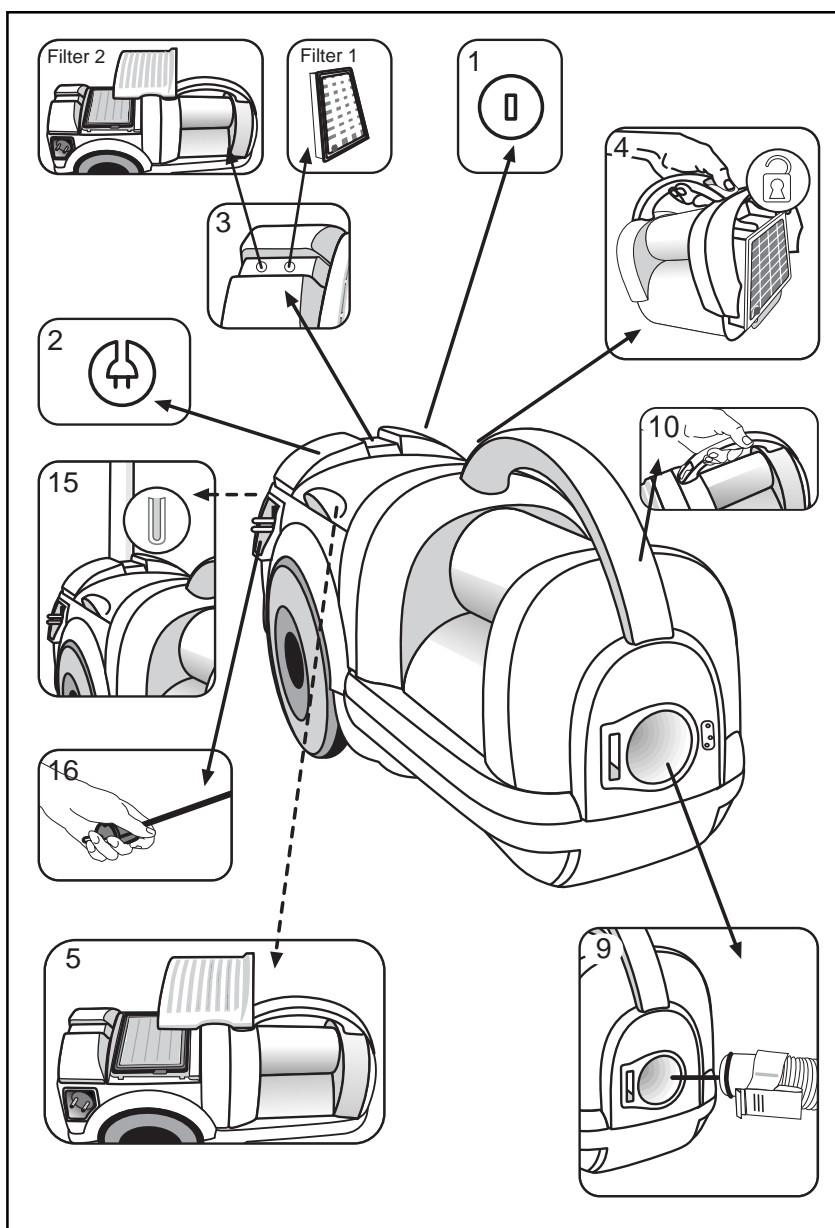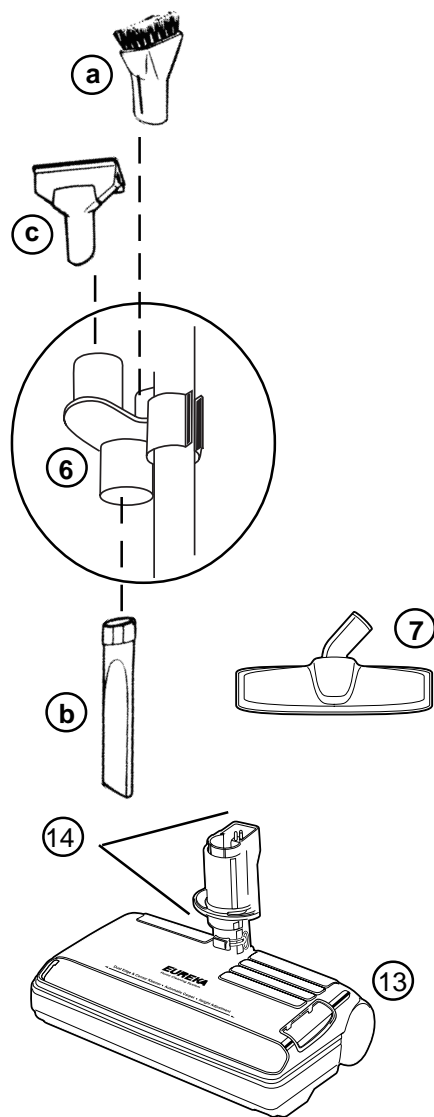

1. Power Switch
2. Cordway Cord Reel
3. Check Filter Indicators
4. Button Latch for Dust Compartment
5. Filter 2
6. Tool Caddy
 - a) Dusting Brush
 - b) Crevice Tool
 - c) Upholstery Nozzle
7. Floor Brush
8. Hose has Power-Touch Handle with nozzle on/off control. See instructions on pages 6 and 7.
9. Hose/Plug Connection
10. Carrying Handle
11. Button-Lock Extension Wand with plug retainer
12. Button-Lock Extension Wand with cord retainer
13. Motorized Nozzle
14. Quick Release™ Wand System
15. Wands and Floor Brush Holder
16. Electrical Plug

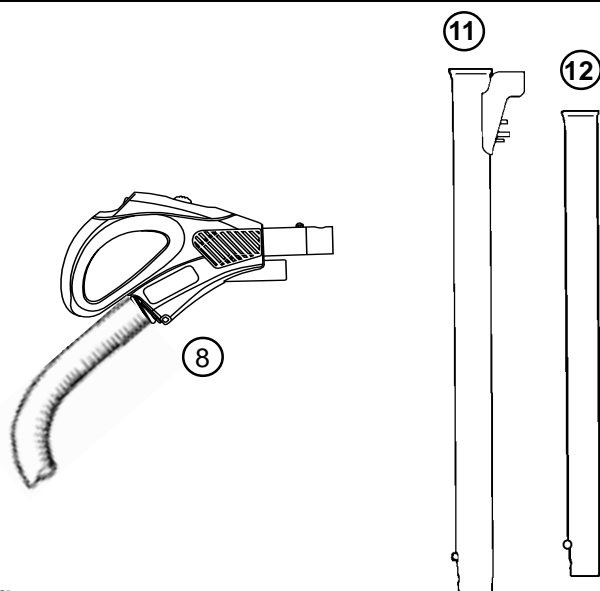

NOTE: Always carry the vacuum by the handle when cleaning steps, etc.


How to Assemble and Use

POWER-TOUCH® Handle

Remote ON/OFF Selector for bare floor or carpet

Carpet – Turn on motorized nozzle.

Bare Floor – Turn off motorized nozzle.


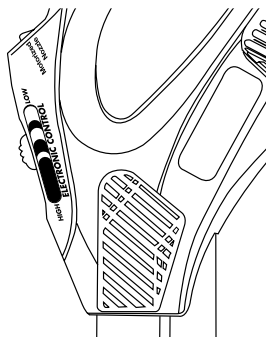


Vacuum Control

Cleaning suction is reduced by pushing lever to LOW position. Place lever at HIGH position to increase suction for carpet cleaning.

1. Snap interlocking wands together.
2. Push assembled wands into the quick release socket attached to the power nozzle.
3. Push motorized nozzle plug into the retainer located at the top of the upper wand; secure cord in slot (Detail A).
4. Place Power-Touch hose handle into wands until plug connects and button locks.


Continue on next page to complete assembly.

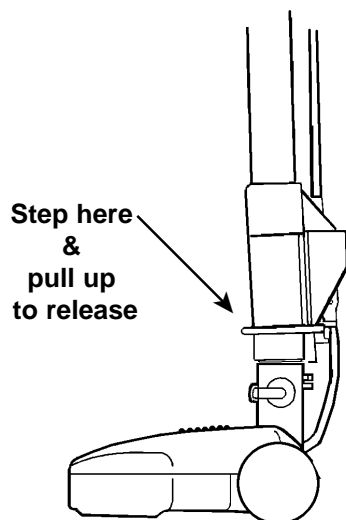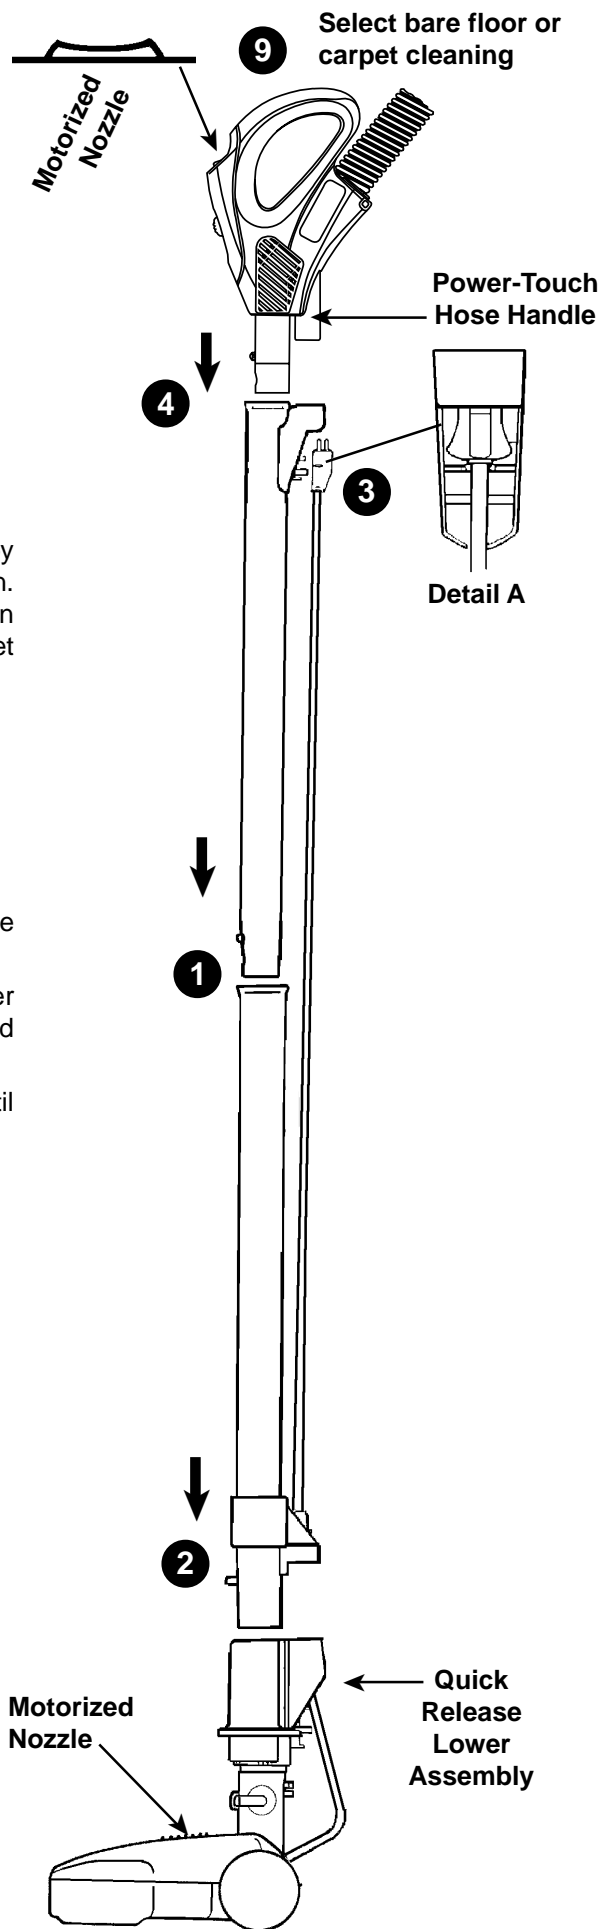


Motorized Nozzle

Quick Release Lower Assembly


How to Assemble and Use (continued)

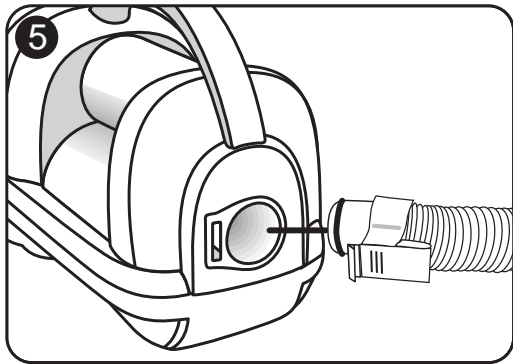


5. Insert hose coupling into front of canister.

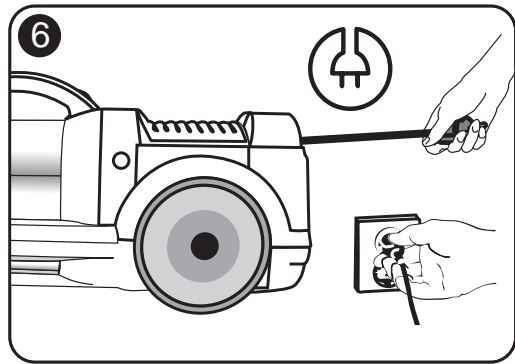


6. Pull cord out until fully extended, and push plug into outlet. To rewind, step on Cordaway cord reel button, hold and guide plug while it rewinds.

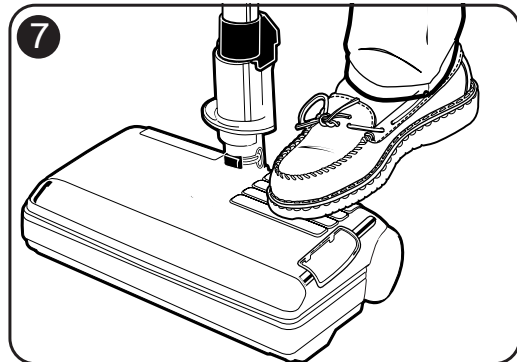

7. Step on motorized nozzle to release handle; pull back to comfortable work position.

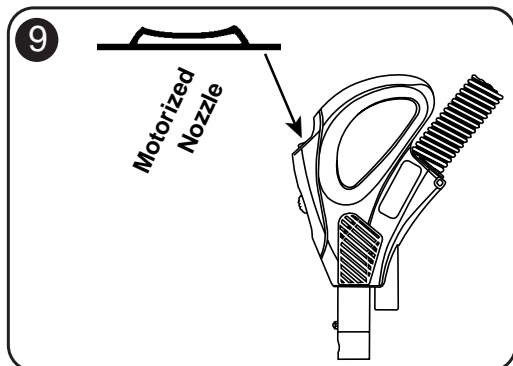

9. Bare floor or carpet cleaning selection on remote control, only.

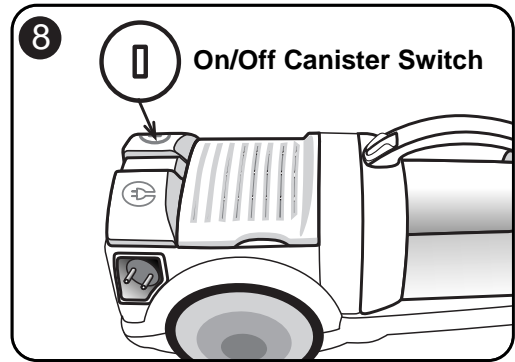

8. Push On/Off canister switch.
(A thermostat automatically shuts off the motor if it overheats, see Thermal Cut Off.)

Tools


10. Attach the four tools to the tool caddy. The tools store on the front of the upper wand. To use cleaning tools, attach them directly to end of hose or use the button-lock wand. Twist the round end of tool onto hose or wand until secure.

a. Dusting brush. For furniture, blinds, books, lamp shades, shelves.

b. Crevice tool. For corners, baseboards, between cushions, sliding door tracks.

c. Upholstery nozzle. For curtains, draperies, cushions, fabrics.

d. Floor brush. For hard floor surfaces.

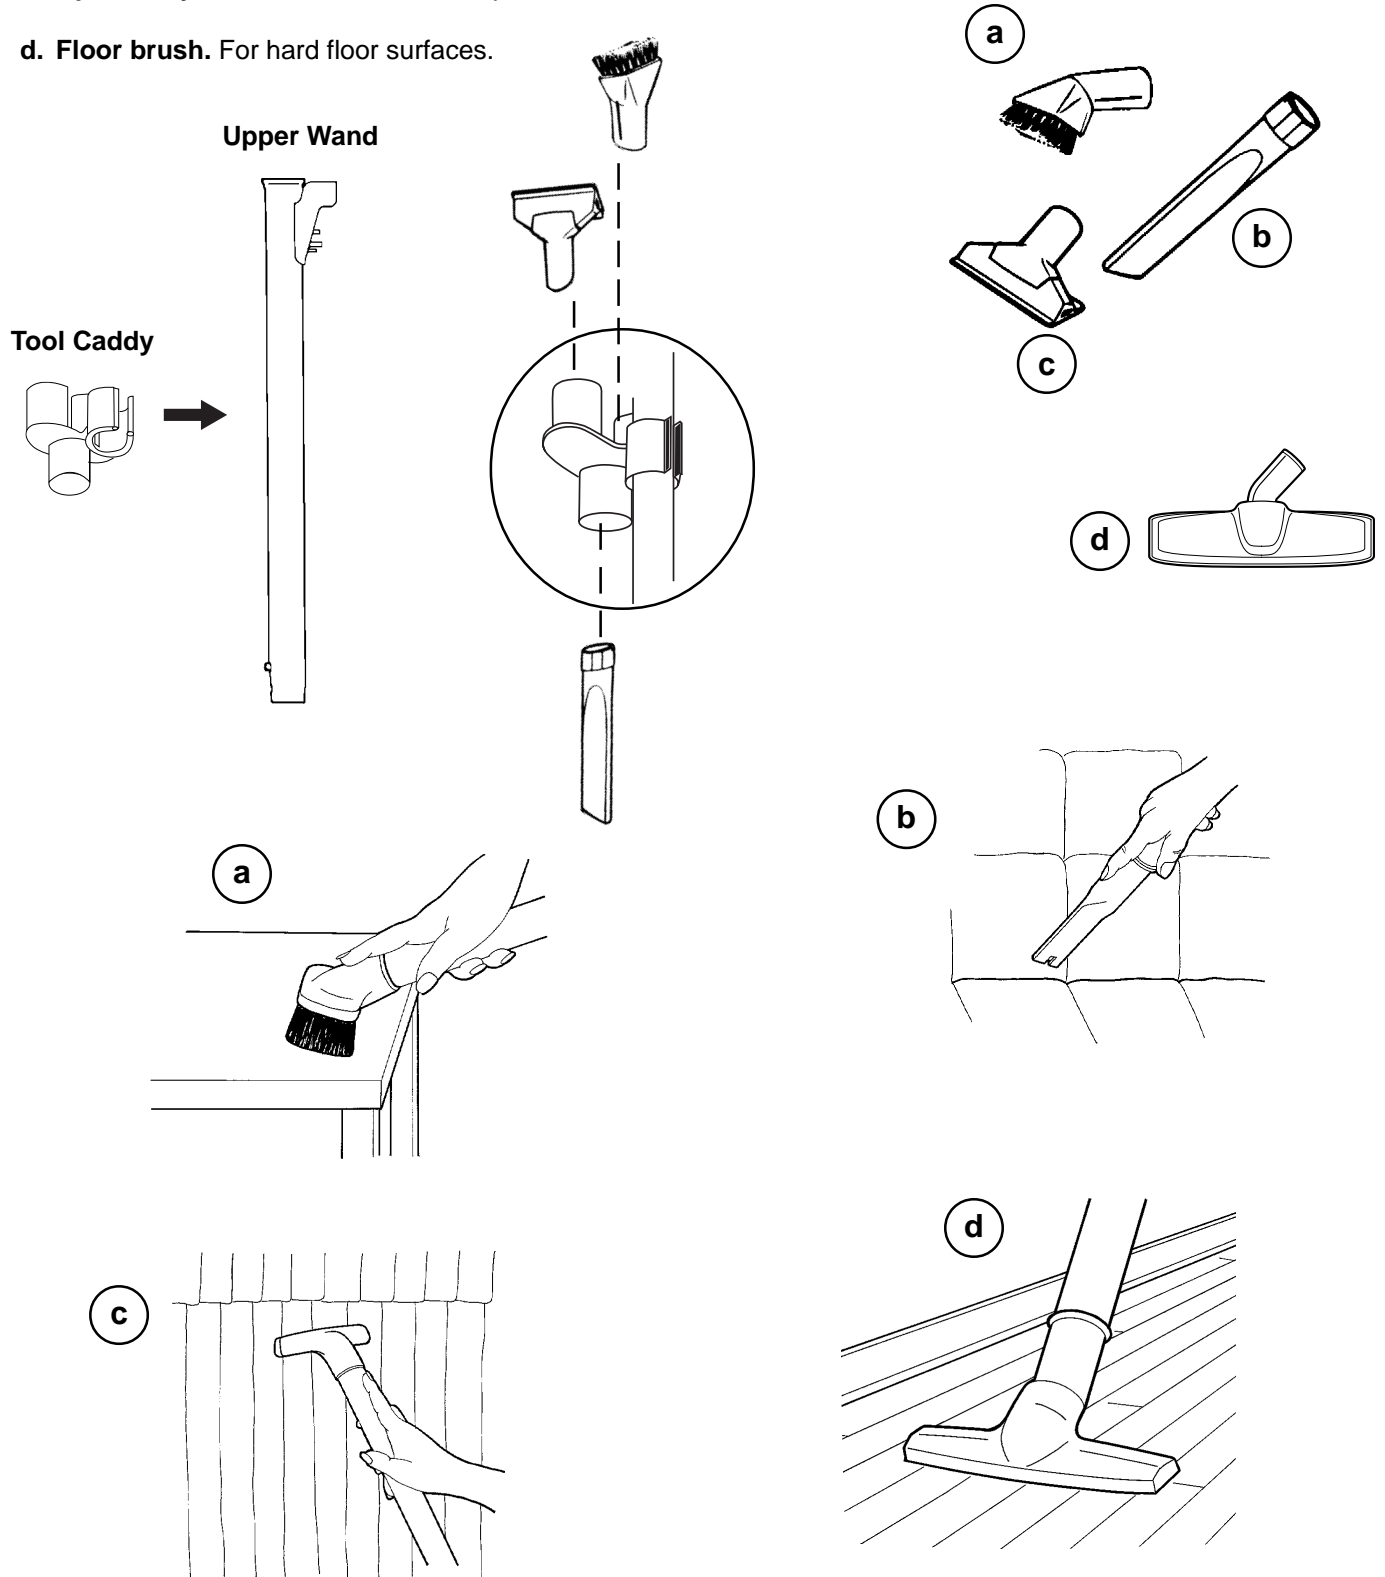

HOW TO MAINTAIN

The filters play a very important role in the efficiency of the vacuum cleaner. If the filters become clogged, no air can pass through the cleaner and no cleaning takes place regardless of how powerful the unit. To keep the cleaner operating at maximum efficiency, check the filters frequently and clean when necessary.

Some fine particles can restrict airflow very quickly and will decrease performance. When vacuuming carpet fresheners or cleaners, plaster dust, or similar fine substances, clean the filters more often.


NOTE: Turn off the switch and unplug the electrical cord before servicing the vacuum.

Emptying the Dust Compartment

Empty the dust compartment after each use or as necessary. When the compartment is full the dust will settle in the filter.

For ease of use, it is recommended that the dust compartment be emptied regularly.

1. Press the button latch and remove dust compartment from unit.
2. To release the dust compartment lid, find the latch at the bottom of the lid. Push down firmly with your thumb lifting with your fingers as in illustration #2.
3. Empty the dust compartment. Wipe the compartment as necessary or rinse and dry it. (**Note: Must not be washed in the dishwasher.**)
4. To reattach lid to dust compartment, put tabs at top of lid inside the slots on the inside of the dust compartment. Push lid against dust compartment until it clicks into place.
5. Put dust compartment back in unit and push down firmly until button latch clicks into place. This will ensure a good seal and maximum suction.

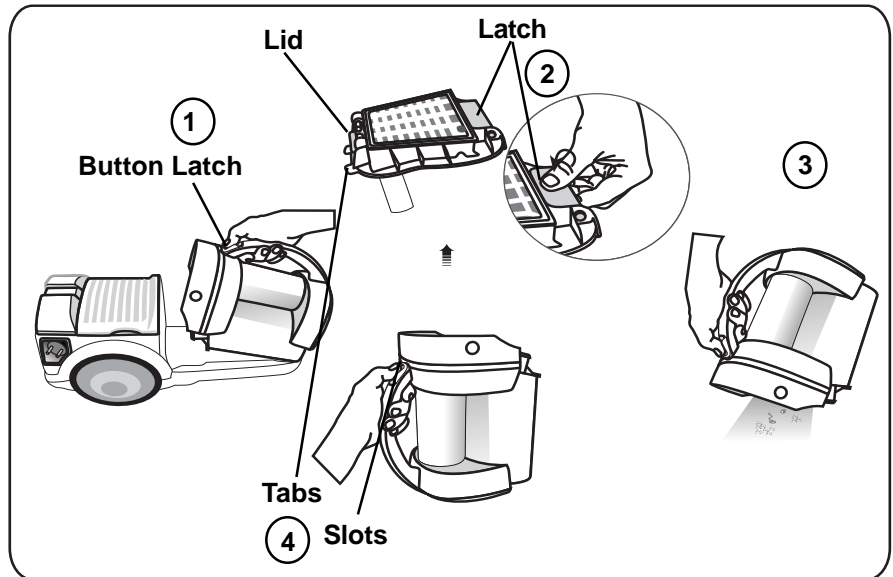

NOTE: Use only Eureka filters. Filter 1 part number 61055 and Filter 2 part number (Style HF1) 60286.

Cleaning/Changing Filters

There are two filters in your Whirlwind. The cleaner must never be used without the filters. A safety device prevents the insertion of the compartment if Filter 1 is not in place. Do not try to force the dust compartment shut.


Cleaning of Filter 1 When the Filter Indicator Light Comes On

Remove and empty the dust compartment as detailed above. Release the filter frame from the dust compartment lid. Remove filter from filter frame. Remove loose fibers and larger particles from the filter.

Hand wash the filter. Remove excess water and leave to air dry. The filter must not be tumble-dried.

Place the dry filter back into the filter frame. Place the filter frame back onto the dust compartment lid and put the dust compartment back into unit.

NOTE: The filter must be completely dry before it is replaced.

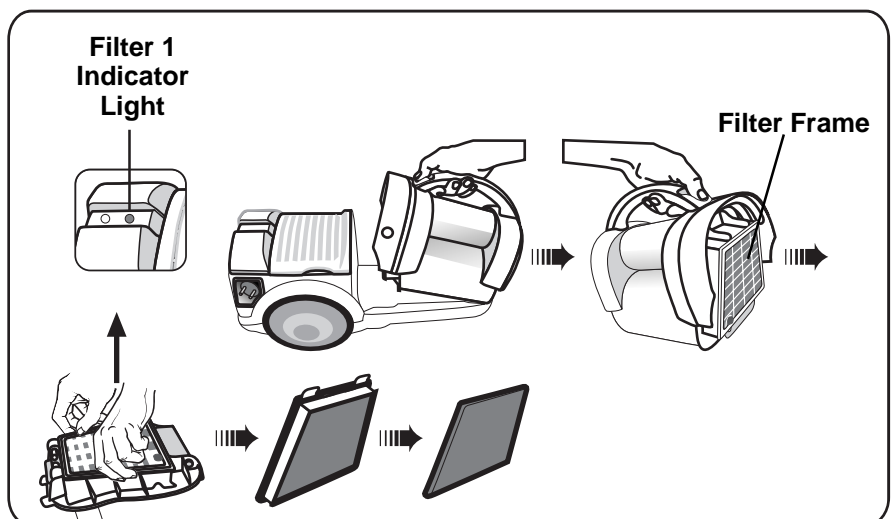


If the filter indicator light is still on, check for possible blockages in the nozzle, tube or hose.

HOW TO MAINTAIN (continued)

Changing Filter 2, when the Filter 2 Light Comes On

Open filter cover and remove dirty filter unit. Place the new filter into the cleaner and close the cover. The original filtering performance is now restored.

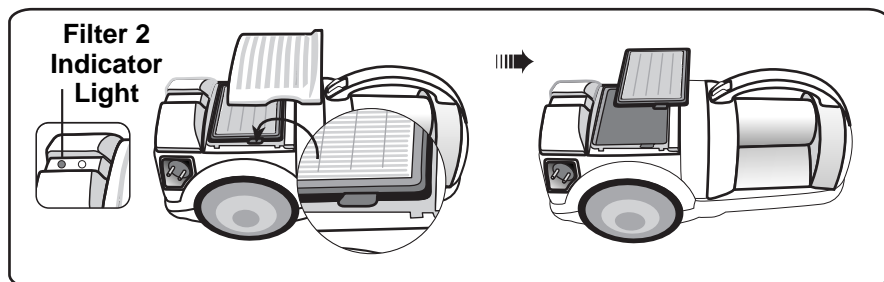

Brush Roll


The brush roll turns to sweep and comb the carpet nap. Keep the brush roll free from hair and threads so it will continue cleaning. When the bristles of the brush roll no longer touch a piece of cardboard held across the bottom plate, the brush roll is ineffective because the bristles no longer touch the carpet nap. To maintain the most effective cleaning, install a new brush roll.

Brush Roll Belt

The brush roll belt on the motorized nozzle drives the brush roll to agitate, sweep, and comb the carpet nap. The belt should be checked regularly to be sure that it is in good condition. Replace the belt if it is stretching, cracking, or slipping. Cut away any hair or thread wound around the brush roll or belt pulley because the buildup could cause the belt to rotate unevenly.

How to Replace Worn Belt or Light Bulb


Note: Disconnect power cord and wands from electrical hose before replacing belt or bulb. Belt pulleys can become hot during normal use. To prevent burns, avoid touching the belt pulley when servicing the drive belt.

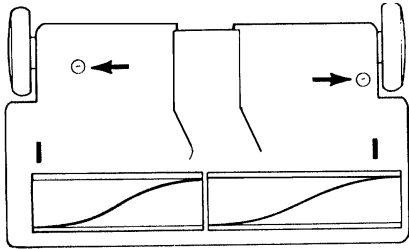


1. Remove two screws from bottom side. Turn over to grasp hood near handle socket and lift forward.

Replace headlight bulb, if necessary. Support socket with one hand and push light bulb into socket; turn to release. Place new light bulb into socket; turn to secure. Push light bulb and socket back so bulb will not touch lens cover. Use GENUINE EUREKA replacement bulb, 59224.

Continue to step 2 to change belt. Skip to step 7 and 8 to replace hood on motorized nozzle.


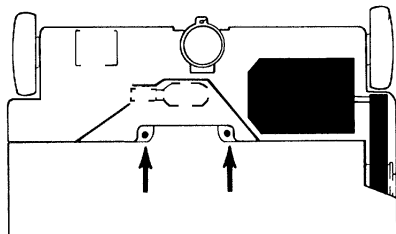


2. Remove two screws located in front of the light bulb and lift up to remove the brush roll cover.

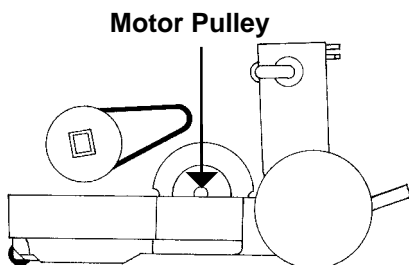


3. Lift out brush roll; replace new belt around brush roll pulley.

4. Return brush roll into base.

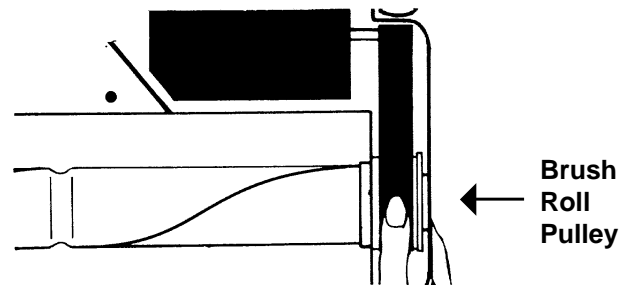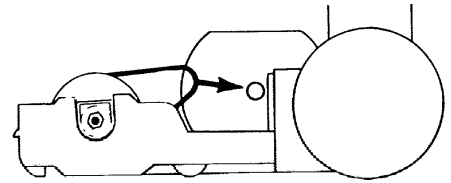

5. Rotate belt onto motor pulley.

6. Replace brush roll cover.

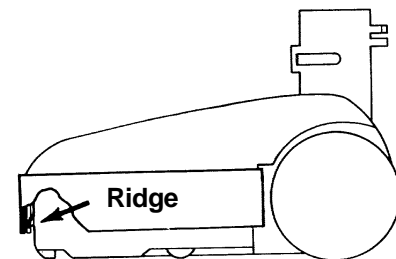

7. Tilt cover over ridge and push down.

8. Secure with screws on underside (refer to 1).

Look for the **GENUINE EUREKA PRODUCT** symbol. Use GENUINE EUREKA replacement belt, 52201B.

PROBLEM SOLVING

NOTE: Turn off the switch and unplug the electrical cord before servicing.

PROBLEM	CAUSE	SOLUTION
Motor will not start.	<input checked="" type="checkbox"/> Electric Plug	<input type="checkbox"/> Push plug securely into outlet. <input type="checkbox"/> Try another outlet. <input type="checkbox"/> Check circuit breaker.
Motor suddenly stops.	<input checked="" type="checkbox"/> Thermal Cut Off	<input type="checkbox"/> Refer to page 4.
Does not clean the carpet or floor.	<input checked="" type="checkbox"/> Filters <input checked="" type="checkbox"/> Dust Compartment <input checked="" type="checkbox"/> Belt <input checked="" type="checkbox"/> Brush Roll <input checked="" type="checkbox"/> Hose	<input type="checkbox"/> Clean or replace the filter(s). Hint: If picking up fine dust, the filter may <u>not</u> look dirty but a fine substance tends to reduce suction when it blocks the airflow through the filter(s). <input type="checkbox"/> Be sure hose connection is inserted properly into dust compartment. <input type="checkbox"/> Be sure the dust compartment is properly seated into the cleaner body. See page 9. <input type="checkbox"/> Empty dust compartment. <input type="checkbox"/> Replace a cut, loose or out of shape belt. <input type="checkbox"/> Clean hair and thread from bristles and end cap area. Replace brush roll if bristles are worn. <input type="checkbox"/> Remove any clogs from the hose that restrict the airflow.
No suction at the end of the hose.	<input checked="" type="checkbox"/> Filter(s) <input checked="" type="checkbox"/> Hose	<input type="checkbox"/> Clean or replace the filter(s). Hint: If picking up fine dust, the filter may <u>not</u> look dirty, but a fine substance tends to reduce suction when it blocks the airflow through the filter(s). <input type="checkbox"/> Remove any clogs from the hose that restrict the airflow.
Headlight not working.	<input checked="" type="checkbox"/> Light Bulb	<input type="checkbox"/> Replace light bulb.
Noise from the brush roll area.	<input checked="" type="checkbox"/> Brush Roll <input checked="" type="checkbox"/> Belt	<input type="checkbox"/> Remove powerhead hood and clean debris or items from the brush roll area. <input type="checkbox"/> Replace a cut, loose or out of shape belt.
Cleaner is hard to push.	<input checked="" type="checkbox"/> Belt	<input type="checkbox"/> Replace a cut, loose or out of shape belt.

ORDER FORM

(Not applicable in Canada)

S O L D T O	Name			
	Address (street address needed for UPS)			
	City		State	Zip
	Telephone (Day)	(Eve)	(Fax)	

SHIP TO	Name		
	Address (street address needed for UPS)		
	City	State	Zip
	Telephone (Day)	(Eve)	(Fax)

IMPORTANT:

Be sure to include your model, type, and serial numbers. These numbers may be found on the rating plate.

Model Number:

Type:

Serial Number:

To Order



By Phone

1-800-

438-7352*

HOURS:

Call between 8 a.m.
and 4:45 p.m.,
central standard time
Monday through Friday



By FAX

1-309-

823-5789

To Answer Problems
or Questions for U.S.A.
and Canada call:

1-800-

282-2886*

7 a.m. to 8 p.m.
central standard time
Monday through Saturday.








 

 



*En Mexico Llame
5670-6169

By Mail



**Simply fill out
this Order Form.
Please be sure to
include day
and evening
phone numbers.**

www.eureka.com

		Part No.	Qty.	Price (USD)	Total
Genuine Eureka Bags, Belts, Filters					
	Belts, package of 2	58065		2.49	
	Cassette Motor Filter	61055		9.99	
	HEPA Filter (style HF1)	60286A		19.99	
Accessories/Tools					
	Dusting Brush with swivel bristles	53359-5		6.49	
	Upholstery Nozzle	22713-9		5.79	
	Crevice Tool	26708-119N		2.69	
	Deluxe Floor Nozzle Assembly	39134-6		9.09	
	Tool Clip	54610		4.59	
	Wand, Upper	37738-5		11.69	
	Wand, Lower	39040A-2		18.39	
	Swivel Hose Assembly	61054-1		106.29	
	Light Bulb (25 watt)	59224		3.69	
	Brush Roll	54419-1		25.09	
Micro Tool Set for Keyboards		54002		12.99	

Total (prices subject to change without notice)**Tax** (add state tax & local taxes as required by law)**Postage & Handling Charge (within U.S.A.)**

\$5.50

TOTAL

TOTAL ENCLOSED

Method of payment (No C.O.D. Orders)

☐ **Check or money order** (payable to **The Eureka Company**). Do not send currency.☐ **Charge to my** ☐ **Visa** (13/15 digits) ☐ **MasterCard** (13 digits) ☐ **Amer. Express** (15 digits)[illegible]

Acct. number

|| || || ||

Expiration Date

Signature (full name as shown on acct.)

THE EUREKA LIMITED WARRANTY

What This Warranty Covers

Your Eureka cleaner is warranted to be free from all defects in material and workmanship in normal household use for a period of one year. The warranty is granted only to the original purchaser and members of his or her immediate household. The warranty is subject to the following provisions.

What This Warranty Does Not Cover

- Parts of the cleaner that require replacement under normal use, such as disposable dust bags, filters, drive belts, light bulbs, and brush roll bristles
- Damages or malfunctions caused by negligence, abuse, or use not in accordance with the Owner's Guide.
- Defects or damages caused by unauthorized service or the use of other than Genuine Eureka parts.

What The Eureka Company Will Do

The Eureka Company will, at its option, repair or replace a defective cleaner or cleaner part that is covered by this warranty. As a matter of warranty policy, the Eureka Company will not refund the consumer's purchase price.

Warranty Registration

Please fill out and return the warranty registration card accompanying your cleaner.

Obtaining Warranty Service

To obtain warranty service you must return the defective cleaner or cleaner part along with proof of purchase to any Eureka Authorized Warranty Station. You will find the nearest location in the Yellow Pages, under "Vacuum Cleaners—Service and Repair." Be certain that the Warranty Station is "Eureka Authorized."

For the location of the nearest Eureka Authorized Warranty Station or for service information, telephone toll free:

USA: 1-800-282-2886

Mexico: 5670-6169

Canada: 1-800-282-2886

If you prefer, you can write to The Eureka Company, Service Division, 807 North Main Street, Bloomington, Illinois 61701, USA. In Canada write to The Eureka Company, 866 Lings Drive, Cambridge, Ontario N3H 2N7.

If it is necessary to ship the cleaner outside your community to obtain warranty repair, you must pay the shipping charges to the Eureka Authorized Warranty Station. Return shipping charges will be paid by the Warranty Station. When returning parts for repair, please include the model, type, and serial number from the data plate on the cleaner.

Further Limitations and Exclusions

Any warranty that may be implied in connection with your purchase or use of the cleaner, including any warranty of Merchantability or any warranty for Fitness For A Particular Purpose is limited to the duration of this warranty. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

Your relief for the breach of this warranty is limited to the relief expressly provided above. In no event shall Eureka be liable for any consequential or incidental damages you may incur in connection with your purchase or use of the cleaner. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

This warranty gives you specific legal rights. You may also have other rights which vary by state.



Questions & Answers about Genuine Eureka Products

Q: Why should I use only Genuine Eureka paper bags, belts, and parts in my Eureka vacuum cleaner?

A: Using Genuine Eureka Products, which are made to our exacting specifications and engineered with emphasis on quality, performance, and customer satisfaction, ensures the long life and cleaning efficiency of your vacuum cleaner. Overall, this saves you money and helps to keep your home clean.

Q: How can I be sure I am using only genuine Eureka products in my vacuum cleaner?

A: Typically, packaged products and paper bags can be identified by a "Genuine Eureka Product" symbol (see illustration above). For further identification assistance, you may call our toll-free number, 1-800-282-2886, for the location of a nearby Eureka Authorized Warranty Station.

Q: Are there any differences between "made to fit" or "imitation" and Genuine Eureka paper bags, belts, and parts?

A: Yes, there are some very important differences in materials, quality, and reliability. Many customers have mistakenly purchased "imitation" paper bags and parts while thinking they purchased genuine. Unfortunately, many of these customers discovered the differences after they experienced related difficulties.

For Genuine Eureka Value, Accept No Imitations!

THE EUREKA COMPANY

Bloomington, Illinois 61701

